


Mat. CI 12.9

s	d2	k	d1	L
2,5	5,5	3	M3x0,5	6
				10
				16
				20
				25
				30
				35
				40
3	7	4	M4x0,7	10
				12
				16
				20
				25
				30
				35
				40
				50
				60
4	8,5	5	M5x0,8	10
				12
				16
				20
				25
				30
				35
				40
				45
				50
				60
				70
				80
				100
5	10	6	M6x1	10
				12
				14
				16
				18

s	d2	k	d1	L
5	10	6	M6x1	20
				25
				30
				35
				40
				45
				50
				55
				60
				70
				80
				120
6	13	8	M8x1,25	10
				12
				16
				18
				20
				25
				30
				35
				40
				45
				50
				55
				60
				65
70				
80				
90				
100				
110				
120				
130				

s	d2	k	d1	L
6	13	8	M8x1,25	140
				150
				160
				180
8	16	10	M10x1,5	16
				20
				25
				30
				35
				40
				45
				50
				55
				60
				70
75				
80				
90				
100				
110				
120				
130				
140				
150				
160				
180				
200				
220				
10	18	12	M12x1,75	20
				25
				30
				35
				40
				45
50				
55				
60				

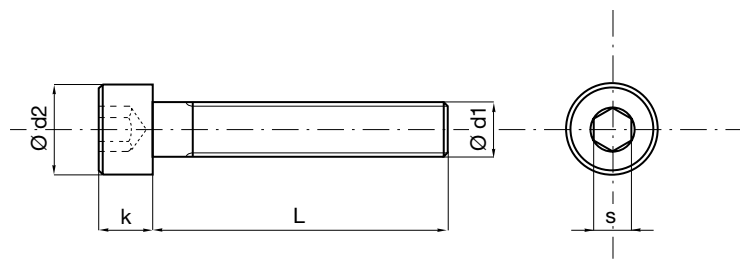

Mat. CI 12.9

s	d2	k	d1	L
10	18	12	M12x1,75	65
				70
				80
				90
				100
				110
				120
				130
				140
				150
				160
				180
				200
				220
				250
12	21	14	M14x2	30
				35
				40
				50
				60
				70
				80
				90
				100
				110
				120
				130
				140
				150
				160
180				
200				
220				
14	24	16	M16x2	30
				35
				40
				45
				45

s	d2	k	d1	L
14	24	16	M16x2	50
				55
				60
				70
				80
				90
				100
				110
				120
				130
				140
				150
				160
				170
				180
14	27	18	M18x2,5	40
				45
				50
				55
				60
				70
				80
				90
				100
				110
				120
				130
				140
				150
				150
17	30	20	M20x2,5	40
				45

s	d2	k	d1	L
17	30	20	M20x2,5	50
				55
				60
				70
				80
				90
				100
				110
				120
				130
				140
				150
				160
				170
				180
19	36	24	M24x3	60
				70
				80
				100
				120
				150
				180
				200
				220
				240
				260
				280
				300
				300

Esempio d'ordine: d1 = M16 L = 40 → S11-M16x40